

## THIS FAN MUST BE EARTHED



# WARNING

- Follow safety related rules and regulations. **(Ordinance on Industrial Safety and Health, etc.)**
- In the case of installation, removal, maintenance, please follow the below requirements.
  - (1) Power off.
  - (2) To avoid falling accident, do not stand under the fan.
  - (3) Tighten moving parts.
  - (4) Wear proper work clothes and protective equipment.
- When carrying out operation test or periodic inspection, make sure protective device functions properly.
- Never operate under the live wire condition, power off before starting operation. **Electric Shock Risk.**
- The wiring, operation, maintenance, check of Shock Relay must be performed by workers with expertise. **Electric Shock, Injury, Fire Risk.**



[www.ventorn.com](http://www.ventorn.com)



## INSTRUCTION MANUAL FOR CONNECTING WIRES

# ROUND AXIAL FAN SERIES

### IMPORTANT:


- 1) Please check all connection before operating fan.
- 2) Select the appropriate connection according to the wire from controller to the fan.



[www.ventorn.com](http://www.ventorn.com)

# 3 CORE WIRING DIAGRAM


2 CORE + 1 CORE (EARTH)

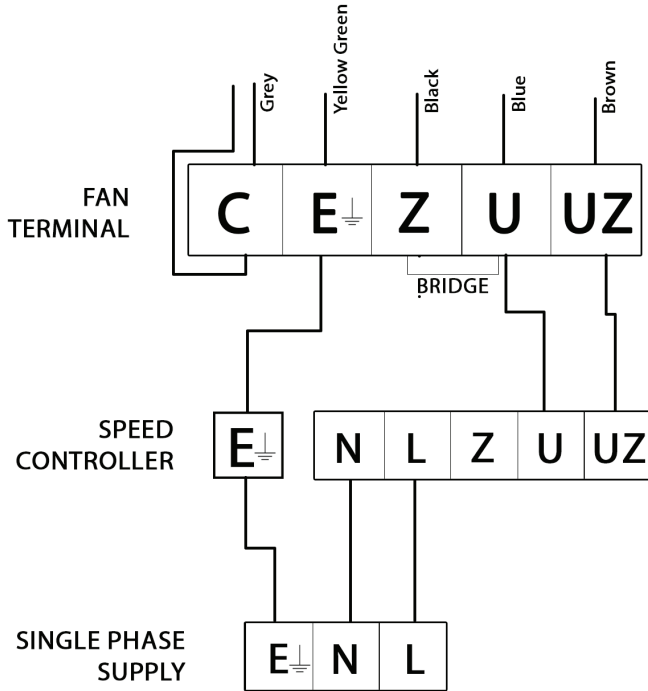

**THIS FAN MUST BE EARTHED**

# 4 CORE WIRING DIAGRAM

3 CORE + 1 CORE (EARTH)

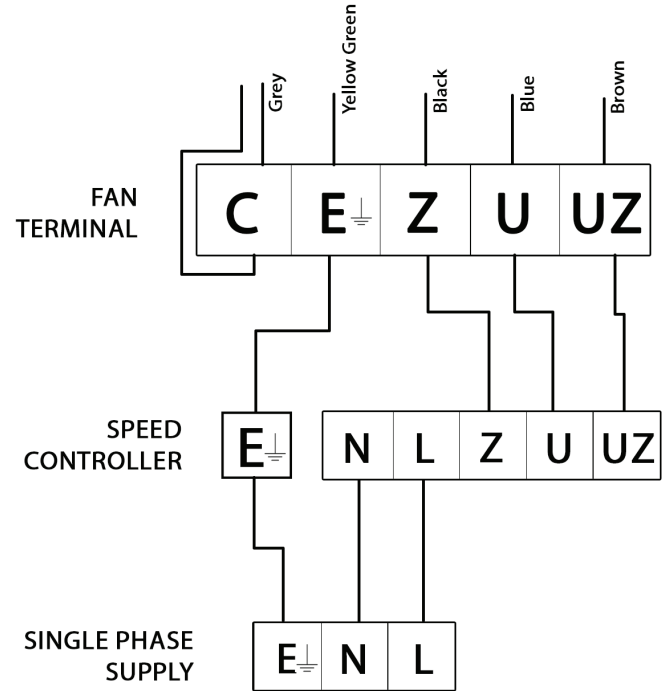

**THIS FAN MUST BE EARTHED**